

SERVICE MANUAL

Level 1&2



RM-303

RM-304



Transceiver characteristics:

Band:

RM-303: EGSM: Tri-band 900/1800/1900MHz

RM-304: EGSM: Tri-band 850/1800/1900MHz

Display:

LCD: 5.08cm QVGA (2.0") (320x240 pixel); 16M colors

Camera:

Camera: 2.0 Megapixel, 4x digital zoom

Operating System:

Series 40

Connections:

Wireless: Bluetooth

Connector: Micro USB Connector; AV Connector

Memory:

MicroSD™ (max 4GB)

Transceiver with BL-4CT Li-Ion battery pack

Talk time	Standby	Note
up to 5.4h	up to 12.5days	Depends on network parameters and phone settings

TABLE OF CONTENTS

	Page
1. CHANGE HISTORY	3
2. COPYRIGHT	3
3. WARNINGS AND CAUTIONS	4
4. ESD PROTECTION	4
5. CARE AND MAINTENANCE	5
6. BATTERY INFORMATION	5
7. EXPLODED VIEW	6
8. LEVEL 2 SOLDER COMPONENTS	7
9. SERVICE TOOLS	8
10. SW-UPDATE	9
11. DISASSEMBLY INSTRUCTION	10
12. ASSEMBLY INSTRUCTION	14

1. CHANGE HISTORY

Status	Version No.	Date	Comments
Draft	0.1	07.Sep.2007	Initial draft
Approved	1.0	13.Sep.2007	Approval
Approved	2.0	24.Sept.2007	Exploded view updated

The purpose of this document is to help NOKIA service levels 1 and 2 workshop technicians to carry out service to NOKIA products. This Service Manual is to be used only by authorized NOKIA service suppliers, and the content of it is confidential. Please note that NOKIA provides also other guidance documents (e.g. Service Bulletins) for service suppliers, follow these regularly and comply with the given instructions.

While every endeavor has been made to ensure the accuracy of this document, some errors may exist. If you find any errors or if you have further suggestions, please notify NOKIA using the address below:

CMO Operation & Logistics
Training and Vendor Development
Multimedia Creation & Support
<mailto:Service.Manual@nokia.com>

Please keep in mind also that this documentation is continuously being updated and modified, so watch always out for the newest version.

2. COPYRIGHT

Copyright © 2007 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region.

IMPORTANT

This document is intended for use by qualified service personnel only.

3. WARNINGS AND CAUTIONS

Warnings and Cautions

Please refer to the phone's user guide for instructions relating to operation, care and maintenance including important safety information. Note also the following:

Warnings:

1. CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
2. THE HANDPORTABLE TELEPHONE MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, EG PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
3. OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.

Cautions:

1. Servicing and alignment must be undertaken by qualified personnel only.
2. Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
3. Use only approved components as specified in the parts list.
4. Ensure all components, modules screws and insulators are correctly re-fitted after servicing and alignment.
5. Ensure all cables and wires are repositioned correctly.

4. ESD PROTECTION

Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.

Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages MUST NOT be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.



5. CARE AND MAINTENANCE

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
 - Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
 - Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
 - Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
 - Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
 - Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
 - Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
 - Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
 - Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.
- All of the above suggestions apply equally to the product, battery, charger or any accessory.

6. BATTERY INFORMATION

Note: A new battery's full performance is achieved only after two or three complete charge and discharge cycles! The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer.

Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime.

If left unused a fully charged battery will discharge itself over time. Temperature extremes can affect the ability of your battery to charge.

For good operation times with Ni-Cd/NiMH batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product).

Do not attempt to discharge the battery by any other means. Use the battery only for its intended purpose. Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.


Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose batteries in a fire! Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

7. EXPLODED VIEW

See corresponding ITEM/CIRCUIT REF in the Spare Parts Service Bulletins on NOL.

5310 RM-303/RM-304 Exploded view

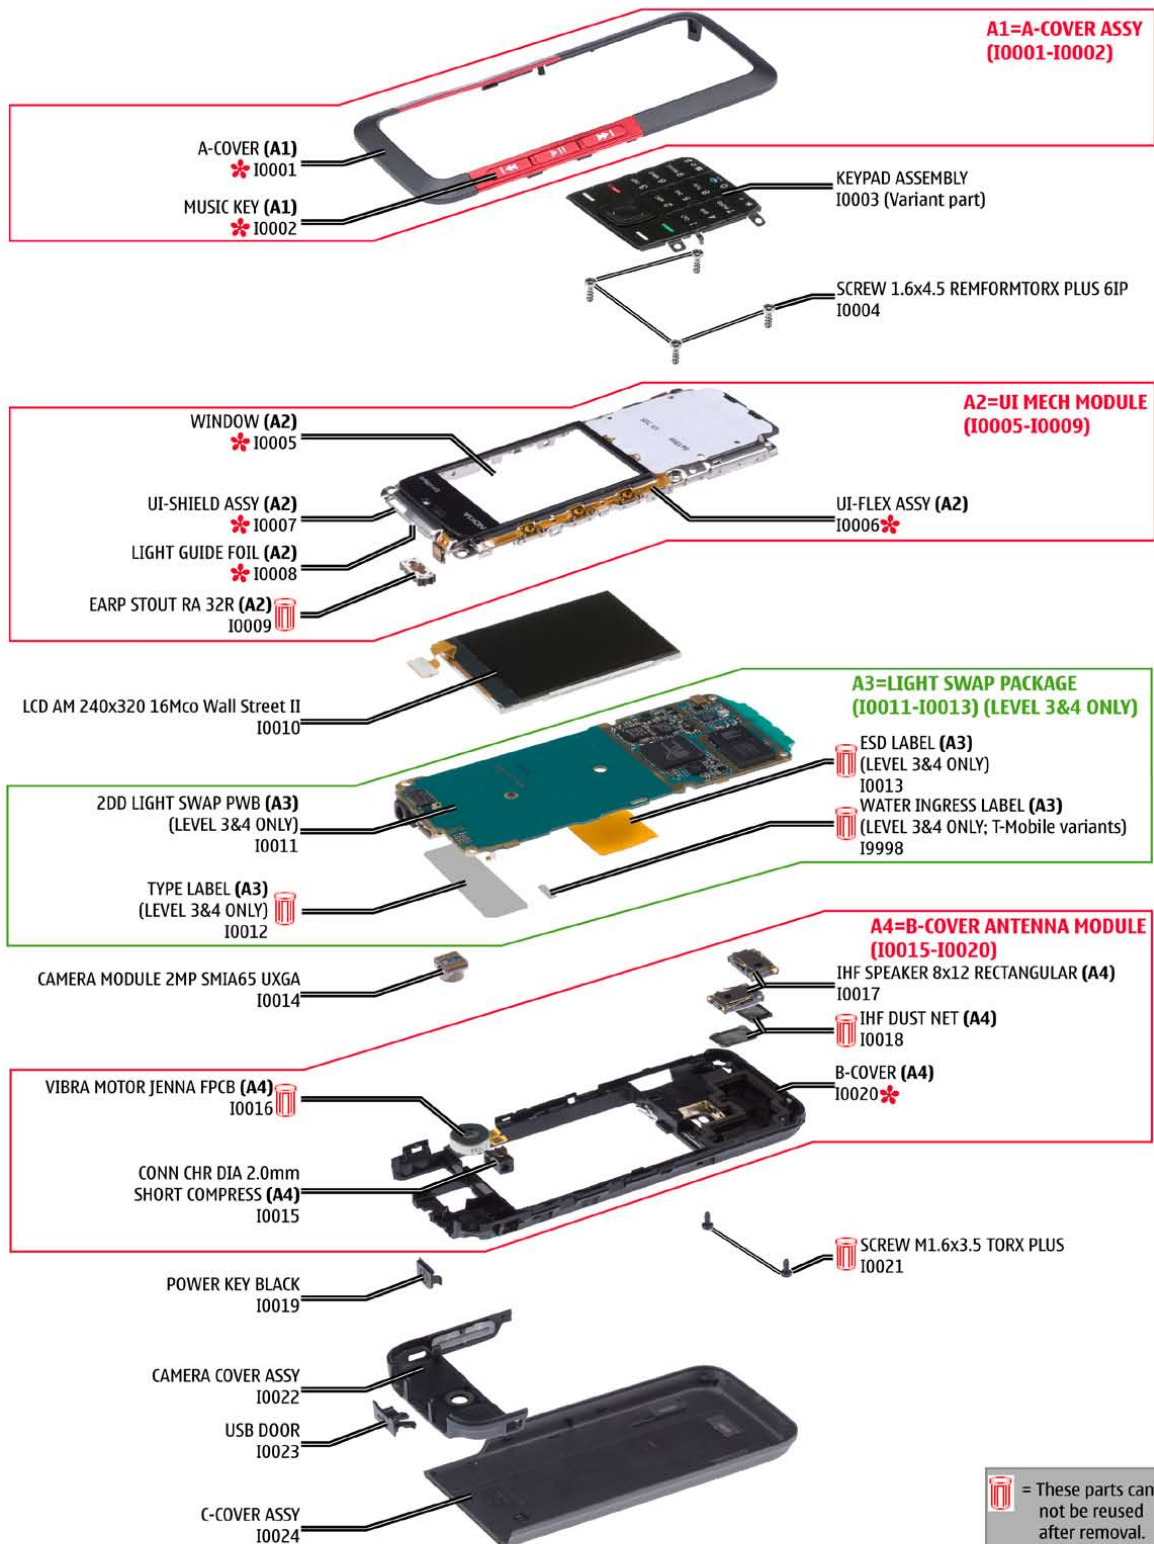


Ver. 3.0

8. LEVEL 2 SOLDER COMPONENTS

5310 RM-303/RM-304 Components overview

Solder components only for LEVEL 2

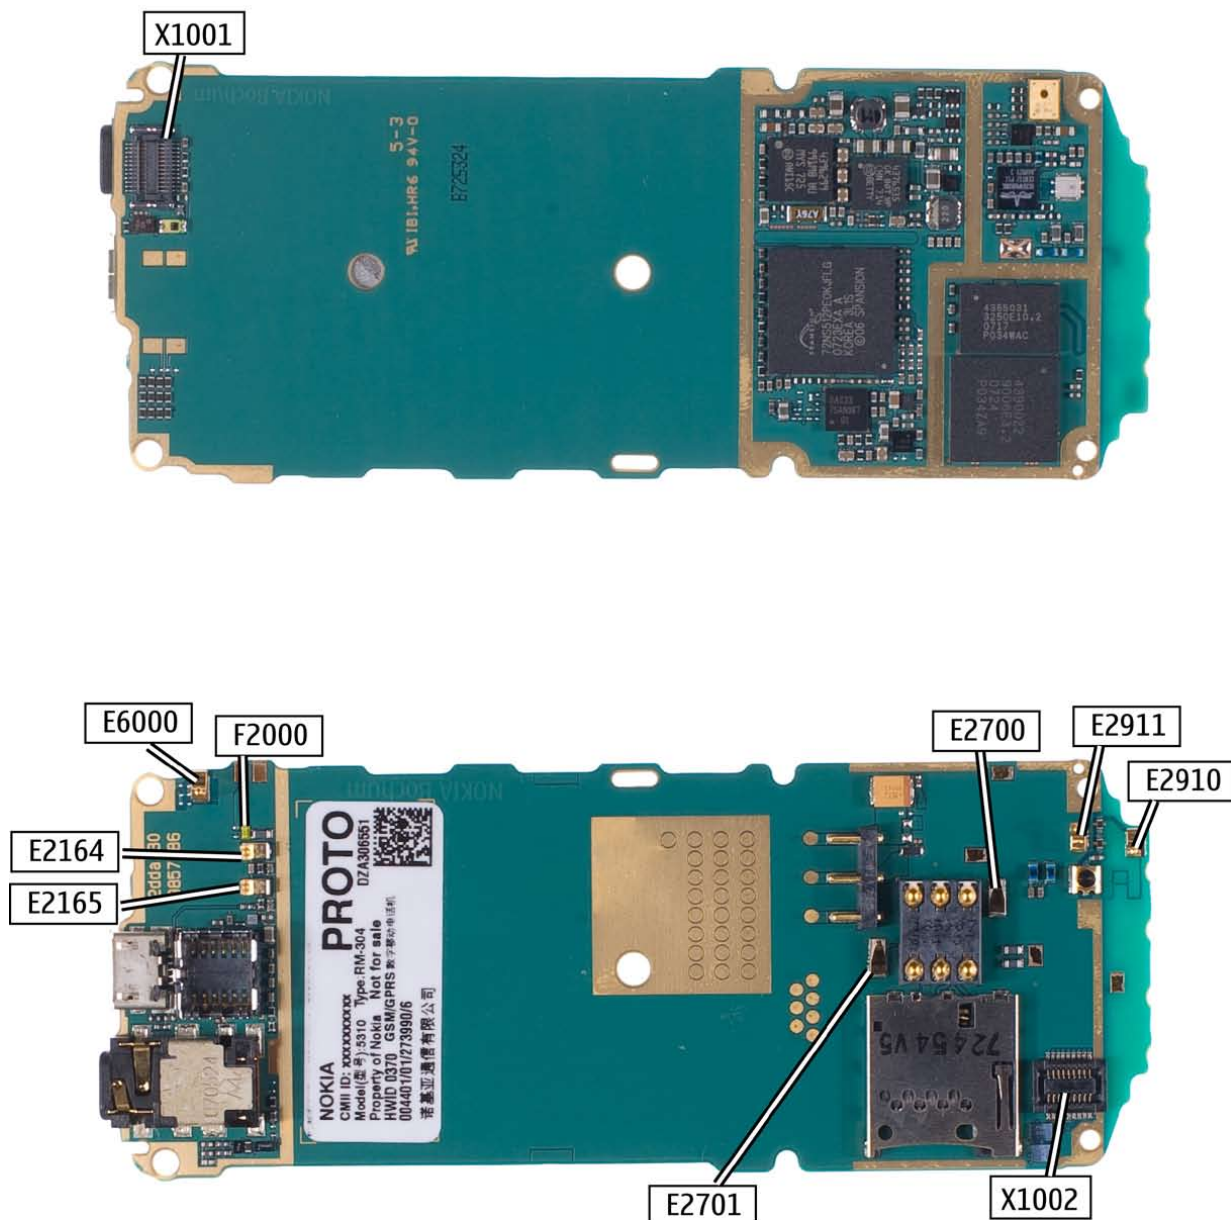

Ver. 2.0


9. SERVICE TOOLS

 <p>FLS-5</p> <p>FLS-5 incl. ACF-8, Driver and User Guide Dongle and flash device incorporated into one package, developed specifically for POS use.</p>	 <p>ACF-8 Universal Power Supply is used to power FLS-5.</p>	 <p>Travel Charger AC-4 Small and lightweight charger for fast charging of your phone battery.</p>
 <p>CA-101 100cm</p> <p>CA-101 Service Cable to connect the PC with the Micro USB connector.</p>	 <p>SS-88</p> <p>SS-88 Camera removal tool. One side is for disassembly, the other side for assembly.</p>	 <p>RJ-185</p> <p>RJ-185 Soldering Jig</p>
 <p>BL-4CT</p> <p>Internal Battery BL-4CT Inserted under the back cover, this Li-Ion battery provides power in a lightweight package.</p>		 <p>0772040 NMP Standard Toolkit (V2) For more informations refer to the Service Bulletin (SB-011) on NOKIA Online. Supplier or manufacturer contacts for tool re-order can be found in “Recommended service equipment” document on NOKIA Online.</p>

10. SW-UPDATE

Flash Concept – (Point of Sales)


To use FLS-5 Flash Dongle you have to follow the user guide inside the sales package. Please check always for the latest version of flash software, which is available on [NOKIA Online](#).

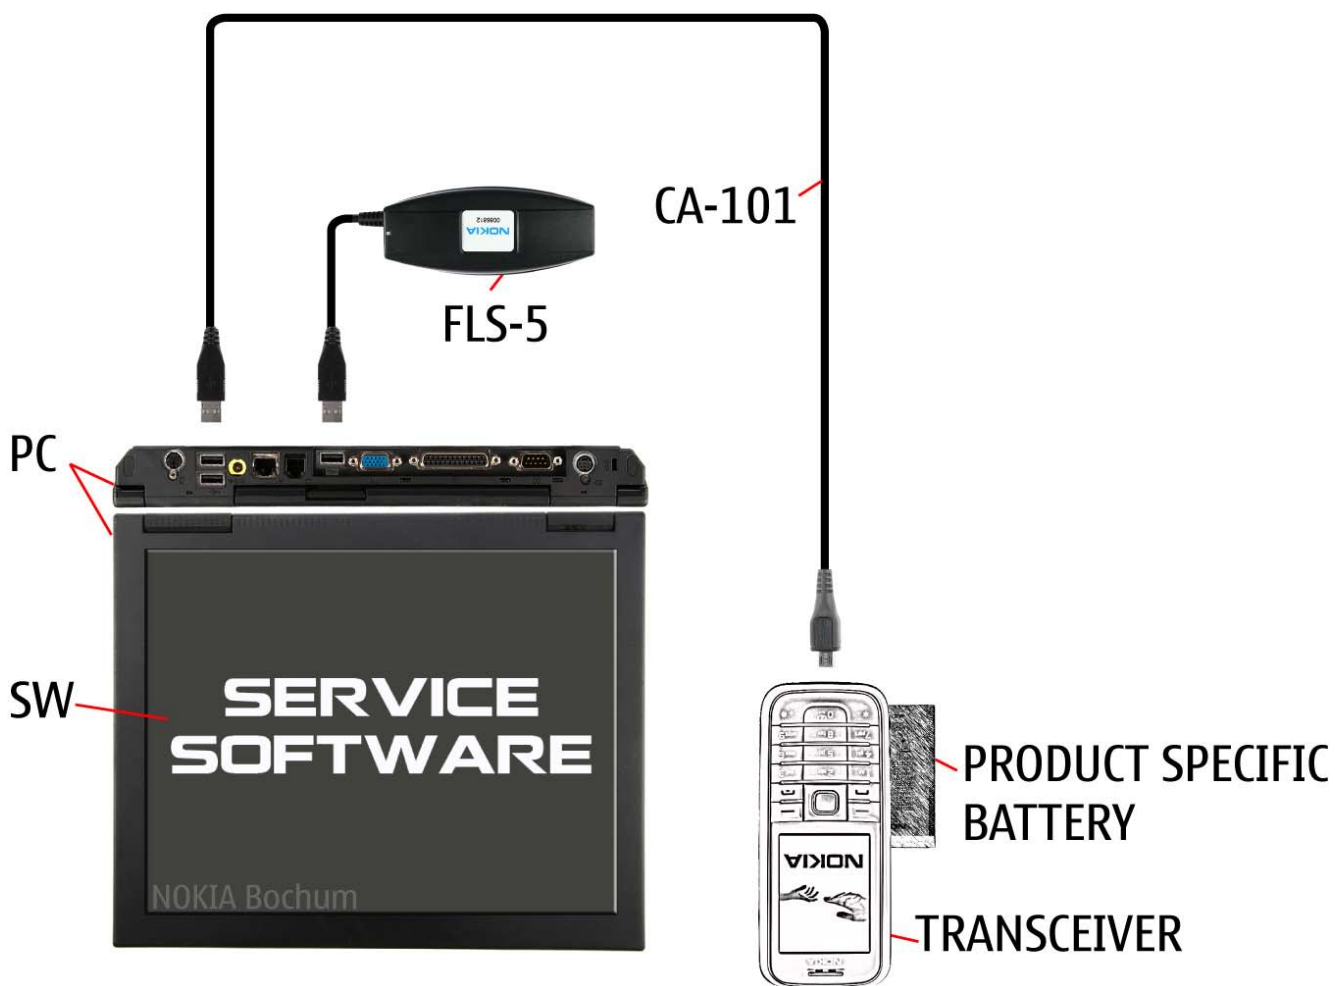


11. DISASSEMBLY INSTRUCTION



1. Nokia 5310 XpressMusic. Disassembly.

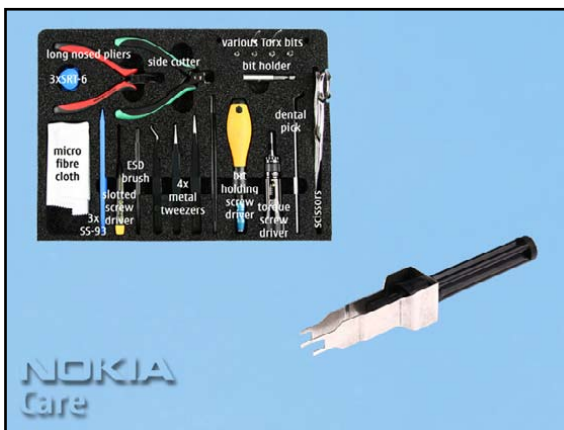

2. You will need the Nokia Standard Toolkit version 2 and the camera removal tool SS-88. Also refer to the General Mechanical Guideline Video for additional hints about the tools and component handling.

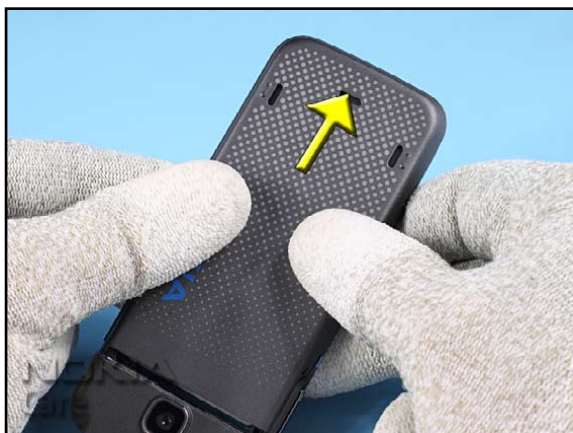

3. Slide the C-COVER ASSY in the shown direction and remove it. Remove the battery if inserted.



4. Place the SS-93 between the CAMERA COVER ASSEMBLY and the B-COVER and unlock the snap on the shown side first.



5. Unlock the snap of the CAMERA COVER ASSEMBLY on the other side and remove it.



6. Undo the screws in the order shown and discard them.




7. Carefully open all clips around the A-COVER with the SRT-6 and remove the A-COVER.




8. Remove the KEYPAD ASSEMBLY.




9. Always cover the DOMESHEET with a protective film against dust and finger prints.
Undo the screws in the order shown and remove them.

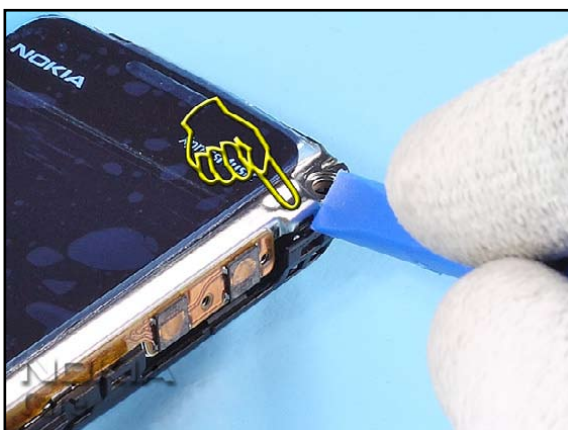


10. Open the hooks of the UI-SHIELD ASSY, beginning on the shown side.

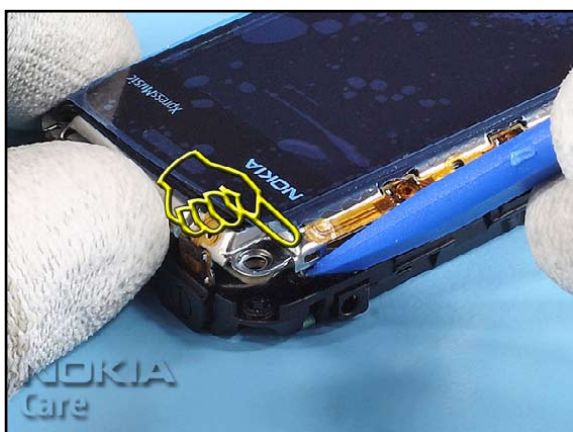


11. Continue on the other side.

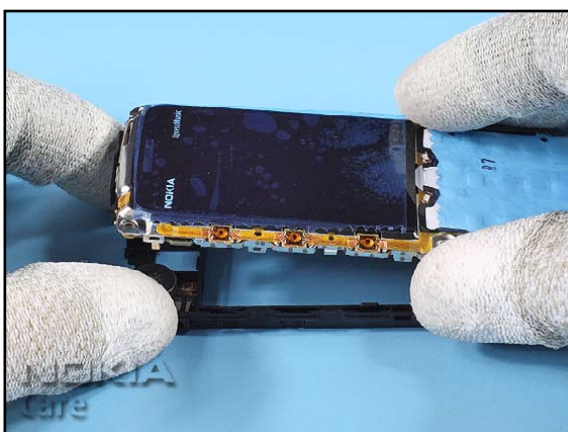

12. Remove the UI MECH MODULE with the PWB from the B-COVER.

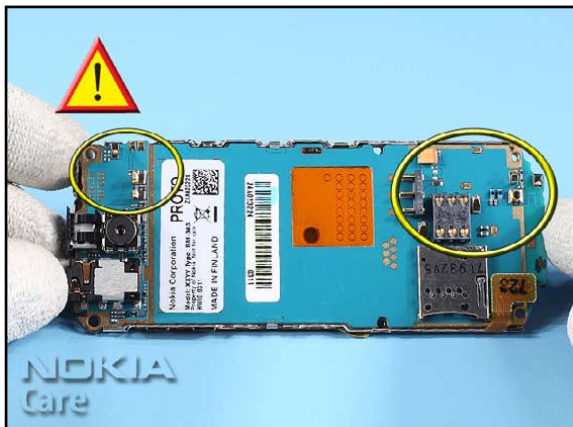


13. Take special care to the spring contacts on the PWB.

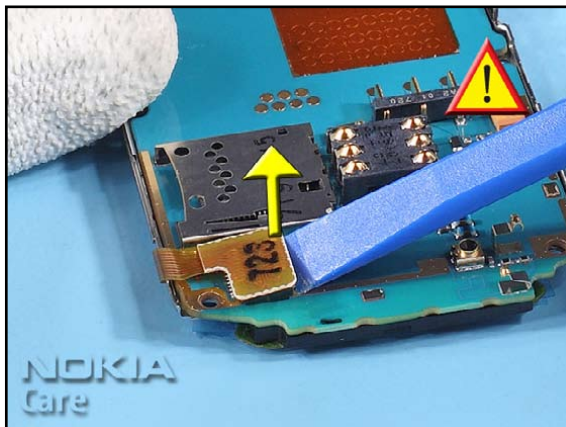


14. Carefully open the UI FLEX connector.




15. The PWB is secured with two hooks to the UI SHIELD ASSY. Gently unlock the PWB with the SS-93...

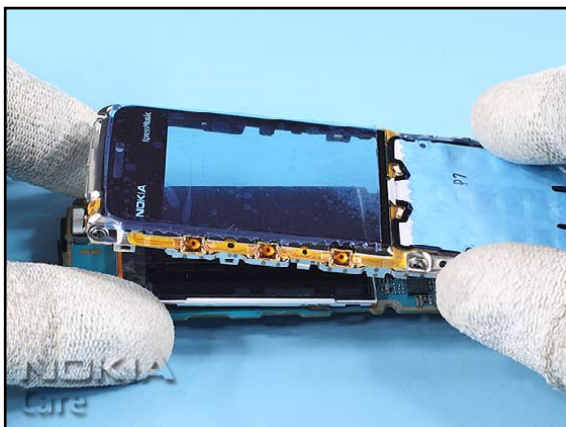


16. ...and remove the UI MECH MODULE.

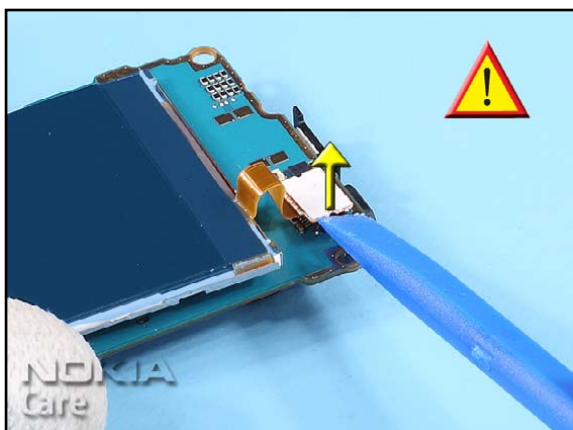


17. Carefully open the LCD connector.

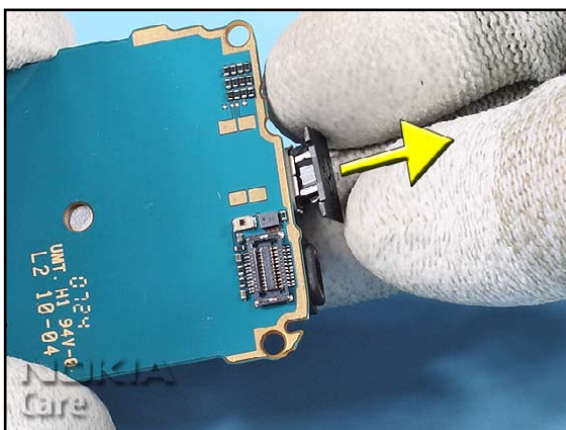


18. Remove the USB DOOR.

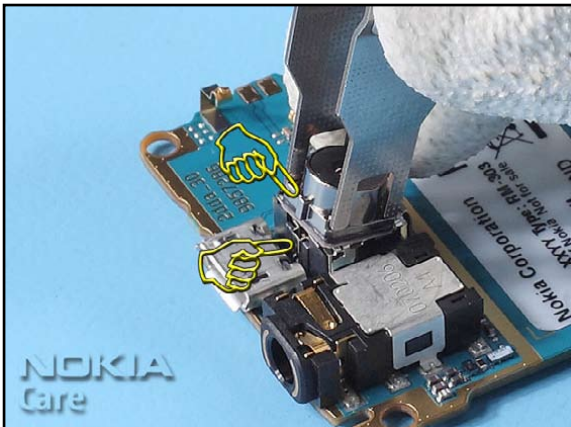


19. Unlock and remove the CAMERA MODULE with the SS-88.

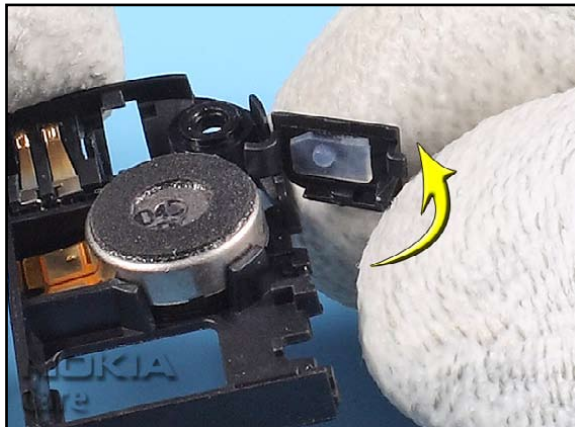

20. Remove the POWER KEY.

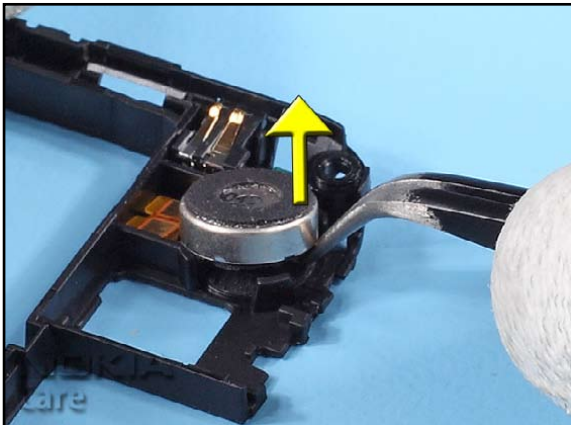

21. Lever out the VIBRA MOTOR and remove it. Remove the adhesive from B-COVER. Use a new VIBRA MOTOR when reassembling the unit.

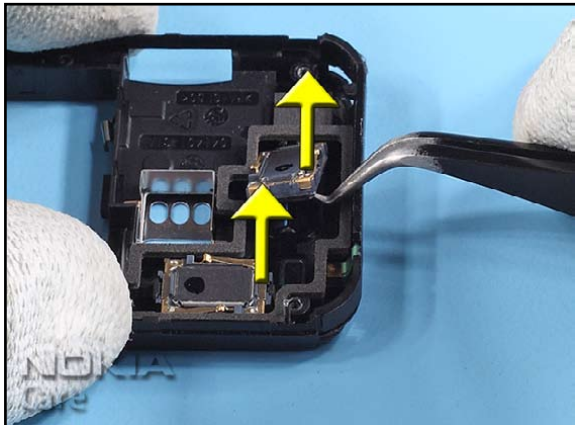


22. Remove the IHF SPEAKER and ensure that no residue of IHF DUST NET remains in the B-COVER. Always use a new IHF DUST NET for assembly. The disassembly procedure is now finished.


12. ASSEMBLY INSTRUCTION




1. Nokia 5310 XpressMusic. Assembly hints.

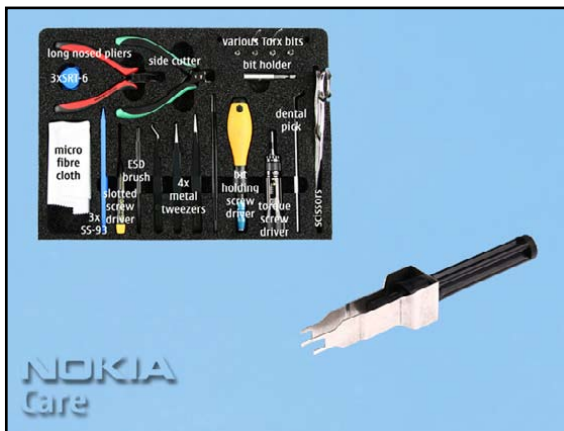


2. You will need the Nokia Standard Toolkit version 2 and the camera removal tool SS-88. Also refer to the General Mechanical Guideline Video for additional hints about the tools and component handling.

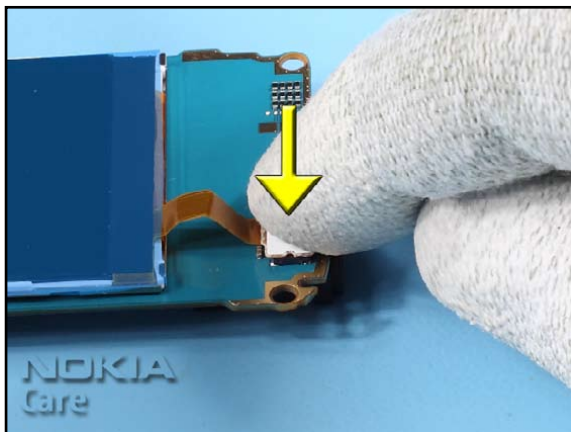


3. Connect the LCD to the PWB.

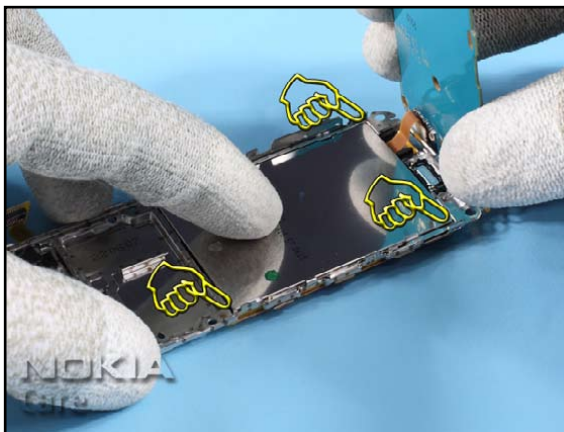

4. Carefully place the LCD into the UI-SHIELD ASSY paying attention to its correct position. Align the PWB with the UI-SHIELD ASSY...

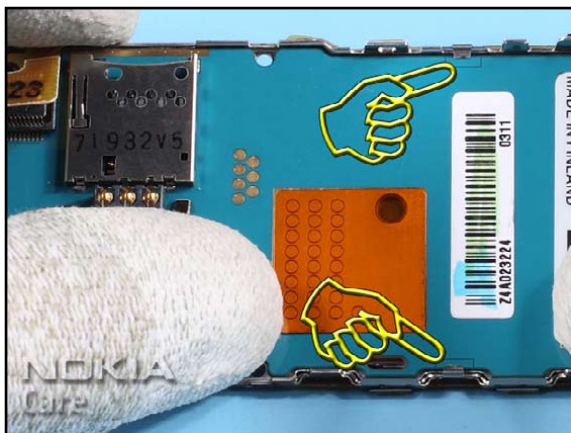


5. ... and gently push it into place. Check the correct position of the PWB.

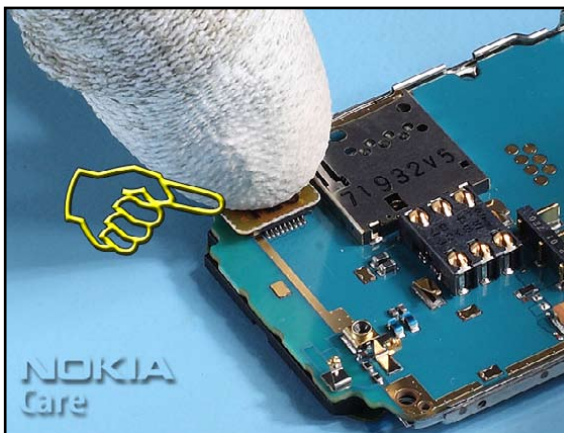

6. Close the UI-FLEX connector.



7. Secure the UI-SHIELD ASSY.

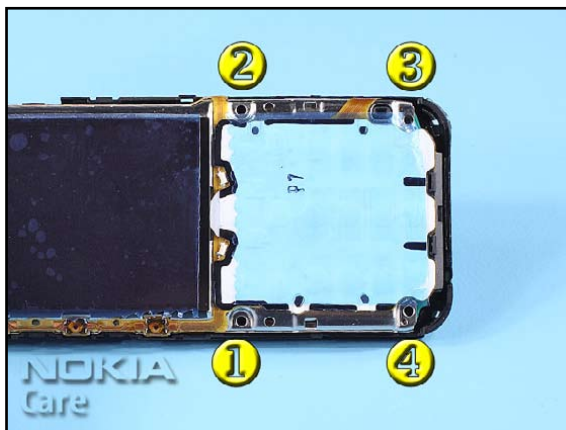

8. Insert the top screws. Tighten them with a torque of 17Ncm in the order shown.



9. Carefully remove the protective film from the DOMESHEET.



10. Align the A-COVER ASSY the B-COVER and gently close all snaps. Check that no gaps remain.



11. Insert new screws and tighten them with a torque of 21Ncm in the order shown.



12. Fit the CAMERA COVER ASSY onto the B-COVER, paying attention to the correct position of the POWER KEY and the USB DOOR.



13. Press the CAMERA COVER ASSY and the B-COVER together.



14. Secure also the other side of the CAMERA COVER.